



**Swan**  
designed for life



## Rechargeable Floor Sweeper

Model: SU4010 (all colours)

Helpline

**01733 404703**

v1.0





## IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

**When using any electrical appliance, basic safety precautions should always be followed including the following:**

- Do not store this device outdoors. Do not charge the battery outdoors. 2. Do not use the device outdoors, e.g. on cement or asphalt, as this could damage the bristles.
- The battery must be charged exclusively with the enclosed charger.
- Do not turn on the triangular sweeper while charging the batteries.
- Charge the device only after the battery is completely empty. This will significantly improve the battery's service life.
- Never use the charger's power cord improperly; do not use the power cord to carry the charger or the device.
- Never pull on the cable to disconnect the power plug from the power outlet; instead, grab the charger plug and disconnect it from the power outlet.
- Keep the charger's power cord away from hot surfaces.
- This product contains nickel/metal hydride batteries. Do not subject them to fire or high temperatures.
- In extreme cases, the batteries might be damaged. In the event that battery liquid comes into contact with skin, rinse it off immediately using soap and water.
- If the liquid comes into contact with eyes, immediately rinse for at least 10 minutes and obtain medical assistance.
- Do not use this device to clean wet surfaces.
- Do not handle the charger or the device with wet hands.
- Do not use the device as a toy; please be very observant when using the device in the vicinity of children. Not suitable for use by children.
- Use the device exclusively according to the instructions listed in this operating manual.
- Do not use the device if the brush is blocked. Keep the brushes free of fibers, hairs, and other objects that could impede proper functioning.
- Keep hair, clothing, fingers, and other body parts away from any moveable parts.
- The sweeper is designed ideally for wood, ceramic, tile and other smooth surfaces.
- It can be used on very short hairless carpets but with limited functionality and battery life.
- Not suitable for carpets with long fibres as carpet fibres may interfere with the brush. If this occurs, the sweeper motor will be turned off to protect itself.
- It will restart after approximately 60 seconds.
- Do not sweep up any burning, smoking or flammable objects.
- Always switch the device off if the battery is completely empty; otherwise, this could damage the battery.
- Do not use solvents, abrasive or aggressive cleaning agents to clean the device.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.





## TECHNICAL DATA

Description: Rechargeable Floor Sweeper

Model: SU4010 (all colours)

4.8VDC 1500mAh

Adaptor input: 240V~ 50Hz

Adaptor output: 6VDC 200mA, Class2



## PARTS

1. Aluminum handle
2. Pole
3. Charger
4. Brush cleaning tool
5. Charging indicator light

### BEFORE FIRST USE

1. Carefully unpack the Sweeper.
2. Ensure that all parts are included before discarding packaging
3. The battery of the rechargeable sweeper is not charged upon delivery.
4. Charge the battery completely prior to first use. **First charge takes up to 10 hours.** Before charging the device, please be sure that it is switched off.
5. Connect the charger to the AC outlet on the wall and the other side plug to the socket on the unit as shown (see Figure 2).
6. Charge indicator light goes out when charging is complete

Figure 1


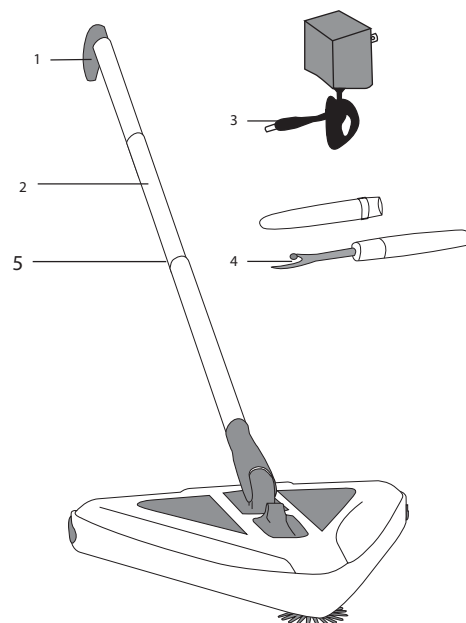


Figure 2



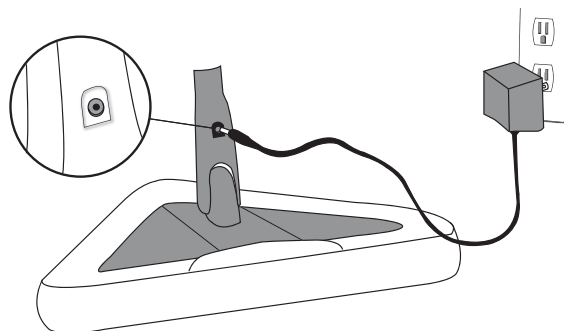


## HOW TO USE

- Once the battery is empty, it is imperative that the device be switched off.
- Avoid allowing the battery to go completely flat as this could damage the battery.
- For optimum performance of the rechargeable battery it should be discharged and recharged completely once each month.
- The battery must always be charged using the enclosed charger. Other chargers will damage the unit or can cause permanent malfunction.

### SWEEPER ASSEMBLY

- Insert the handle into pole part A (see Figure 3).
- Connect the parts of the pole together, matching the numbers written on the back of the parts to one another (#1, 2, 3).
- Be sure that the handle points in the right direction.
- Please ensure that part C of the pole is attached to the base of the unit (Part D). This part contains the battery and needs to be inserted to the base to operate.

Figure 3

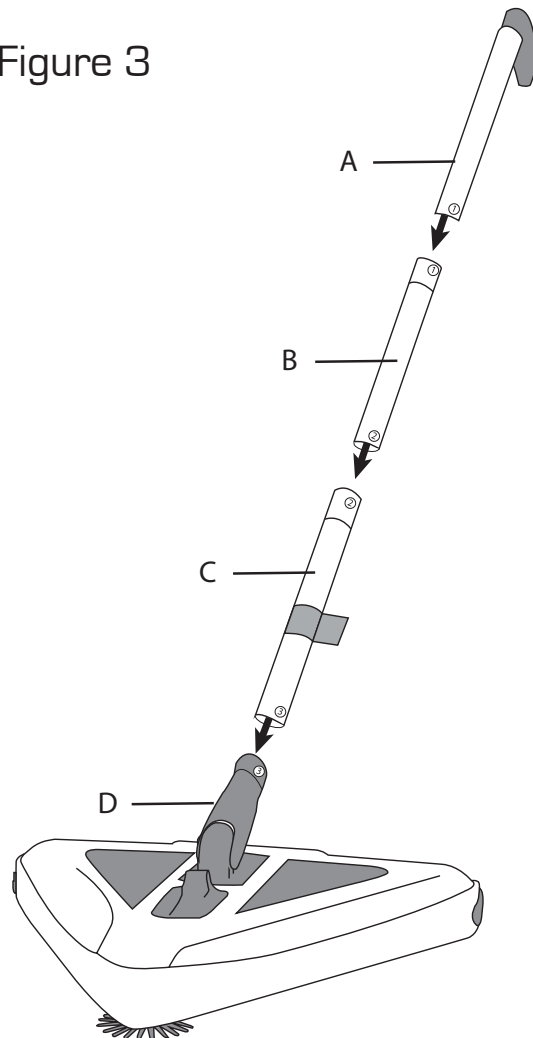



## HOW TO USE

### OPERATING INSTRUCTIONS

- Grab the handle and rotate the handle extension from storage position to a comfortable work position (see Figure 4).
- To sweep, use the power switch on the base to turn the device on. If a brush should fail during operation, please switch the device off immediately by using the power switch and determine the cause. (see Figure 5).

Figure 4

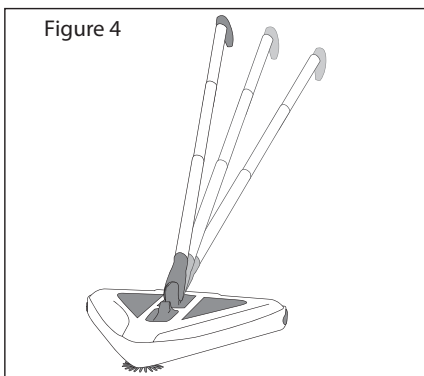



Figure 5



### EMPTYING THE DUST CONTAINER

1. With one hand, hold the sweeper by the pole and lift it up.
2. Position the sweeper above a trash bin.
3. With the free hand, use your thumb to squeeze the dust-release button towards the pole and your index finger as a stabilizer behind the pole (see Figure 6).
4. The dust-bin door will open and the dirt particles will fall into the garbage bin.
5. To close the dust bin, place the sweeper on a flat and smooth surface. It will close upon contact with the floor.

Figure 6

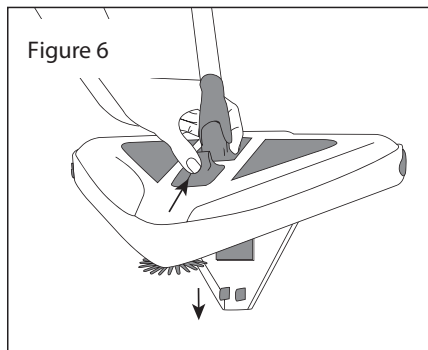




## HOW TO USE

### BRUSH CLEANING TOOL

Over time, the appliance's cleaning brushes may accumulate fine debris such as hair, thread and other particles. It is recommended to clean the rotating brushes on occasion using the included Brush Cleaning Tool

1. Make sure the appliance is turned off before cleaning.
2. Use the cleaning brush tool to cut and remove tangled debris [see Figure 7]. Simply guide the blade along the shaft of the Rotating Cleaning Brushes.
3. Dispose of debris in garbage.

Figure 7

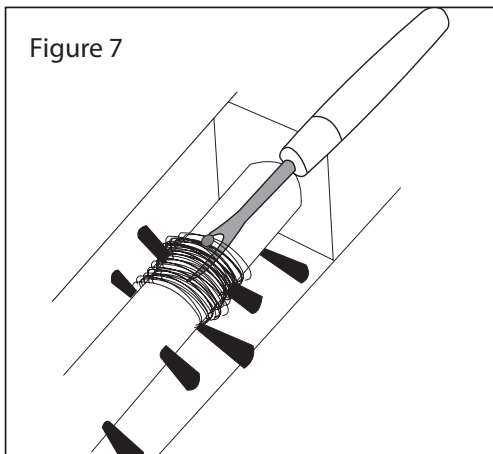

### BATTERY DISPOSAL

The sweeper is equipped with nickel/metal hydride batteries (NiMH), the components of which could damage the environment if not disposed properly. Please recycle the complete handle with the integrated rechargeable battery pack. Do not discard packaging material and used device, recycle them instead. Please contact your local council for the nearest recycling center.

NOTE: USE ONLY REPLACEMENT BATTERIES OFFERED BY THE MANUFACTURER.

### CARE AND MAINTENANCE

1. Use a dry cloth to clean the product including the dust container and remove hair and fibers from the bristles. This is best done if the dust container is removed from the casing so that you will have optimum access to the bristles.
2. Do not use abrasive material to clean the device and do not submerge it in water under any circumstance.
3. Do not use the device to sweep up any liquids and do not use it on a moist surface.
4. Do not use it on cement or other rough surfaces.
5. Do not use the device to collect strings or fabric fibers.
6. Do not use the device to clean carpet fringe or frayed carpets.

**NOTE :** This sweeper performs best on smooth surfaces such as wood, ceramic, tiles and marble. It will also work on short-haired carpet, but with reduced performance. Not ideal for use on long-haired carpets.





## DOCUMENTATION

We Swan Products Ltd declare that this product conforms to the following product legislation in accordance with the following directive[s]:

2004/108/EC The EMC Directive (the Electromagnetic Compatibility Directive).

2006/95/EC. The LVD Directive (Low Voltage Directive).

2011-65-EU. The RoHS directive (Restriction of Hazardous Substances Directive)



## WARRANTY

This product is guaranteed for 2 years from the date of original purchase. If any defect arises due to faulty materials of workmanship the faulty products must be returned to the place of purchase. Refunds or replacement is at the discretion of the store.

**The following conditions apply:**

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- Swan Products Ltd has limited liability for incidental or consequential loss or damage.
- This guarantee is valid in the UK and Eire Only.



## DISPOSAL OF UNIT



Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately. Please visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or [www.recyclenow.co.uk](http://www.recyclenow.co.uk) for access to information about the recycling of electrical items. Please visit [www.weeeireland.ie](http://www.weeeireland.ie) for access to information about the recycling of electrical items purchased in Ireland. The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.





[www.swan-brand.co.uk](http://www.swan-brand.co.uk)



Scan this QR code  
to hear about  
our story



We love  
what we do



we're proud  
of our quality



Find us on Facebook

\* on selected products

Copyright © Swan Products Ltd.  
PO Box 3117, Stoke-on-Trent ST4 9GD

